

Roma Tri-CCT Bollard Installation Guide

WARNING:

- THE PRODUCT MUST BE INSTALLED BY A QUALIFIED ELECTRICIAN.
- THE POWER SUPPLY MUST BE TURNED OFF BEFORE INSTALLATION.
- NO WARRANTY WILL BE ACCEPTED IF THIS PRODUCT IS NOT INSTALLED BY A QUALIFIED ELECTRICIAN.
- THE EXTERNAL FLEXIBLE CABLE OR CORD OF THIS LUMINAIRE CANNOT BE REPLACED; IF THE CORD IS DAMAGED, THE LUMINAIRE SHALL BE DESTROYED.
- THE DRIVER CAN'T BE REPLACED.
- WHEN PRODUCTS ARE INSTALLED IN HIGH WIND ENVIRONMENTS, APPROPRIATE INSTALLATION/FASTENING METHODS MUST BE APPLIED SO THAT THE PRODUCT MOUNTING POINTS ARE NOT DAMAGED DUE TO VIBRATION,MOVEMENT OR CORROSION.




PRODUCT SPECIFICATION


Part No.	Model No.	Voltage	Watt	PF	Color Temp.	Lumens	Lifetime L70B50	Net Weight (kg)
491000	BOTCM22-D145	220-240V	22/16/12W	0.9	3000K/4000K/5000K	3080/2240/1680lm	50000h	4.22

[1] Operating Frequency=50Hz;[2] Operating Temperature:-30°C~+50 °C;

INSTALLATION METHODS

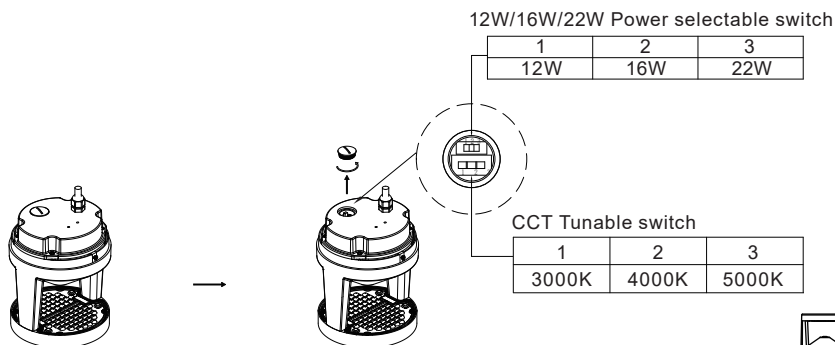


Accessories		
	Anchor bolts	3PCS
	Fixed bracket	1PC
	M8 Nuts	3PCS

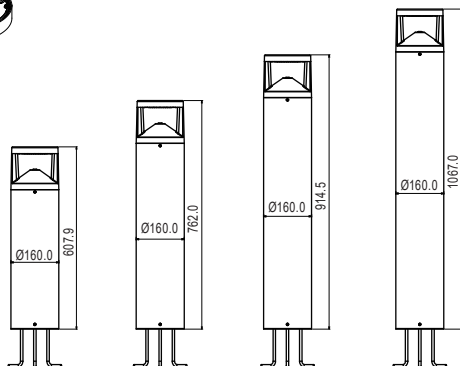


WARNING: TURN OFF POWER BEFORE CONNECTING WIRES.


Step 1: The anchor bolts are installed on the fixed bracket.

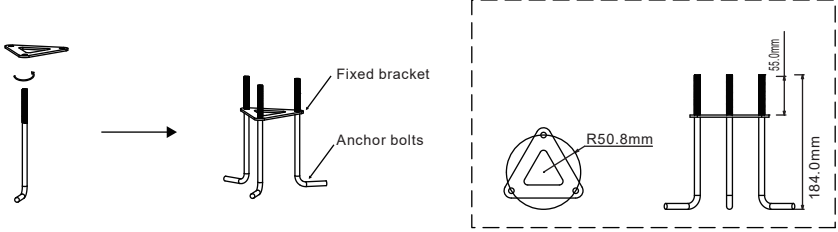


Step 2: Install the anchor bolts and bury them into the ground and lead out the terminals.

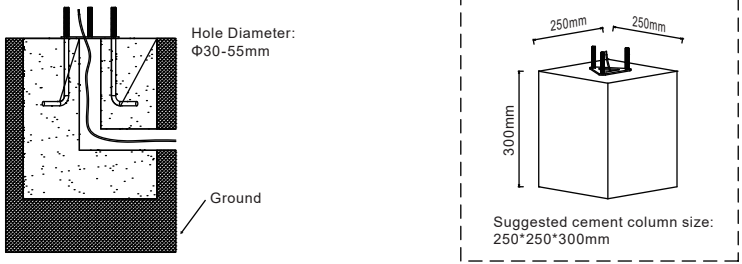


Step 3: Fit the fixed cover on the anchor bolts with nuts.

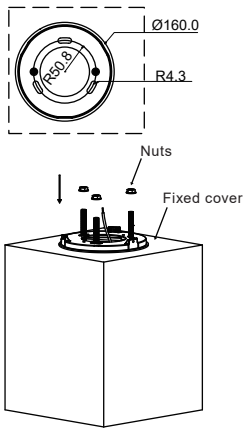

Step 4: Connect the wires according to the diagram.

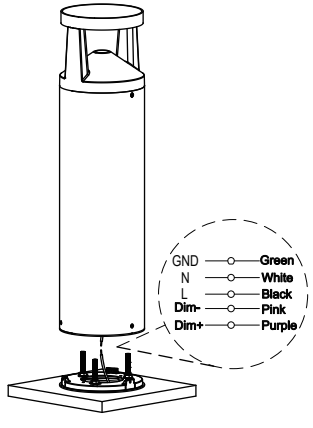

Step 5: Countersunk head screws to fix the bollard base.

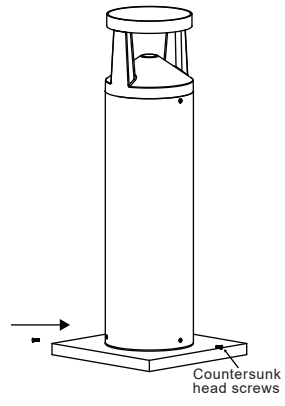

Energetic Lighting Australia Pty Ltd
Unit 1, 350 Edgar Street, Condell Park,
Sydney, NSW, 2200, Australia
Tel: 1300 215 598
E-mail: info@energeticlighting.com.au
Web: energeticlighting.com.au